

PI 232

Place hook end between handle and plastic ring. Apply constant pressure so that points A and B have full contact. Rotate tool slowly until clip comes free. The spring behind the door panel should force the handle off.

* If circlip is removed and handle does not spring free, it may require gentle rattling on its post.

* Take care when removing circlip, as it may easily be lost.

To reattach: Place circlip on handle with plastic ring. Line up desired position on post and strike handle sharply with heel of hand.

* If handle does not seat properly, or there is a gap between handle and plastic ring, blunt end of tool can be used to seat the circlip.

