

## 1. How to change an old push release button from shifter gear knob

- 1). Release the old push button by using a small screw driver to push the



shifter gear knob button (see diagram 1).

- 2.) Take out the secure pin from the old push button (as 2)




- 3). Release the spring by using the needle –nose pliers. (See diagram 3)



- 4). Pull the old push button out and ready for replacement.

## 2. How to install a new push button

- 1). Put the new push button in the lower pin position. (See diagram 4)

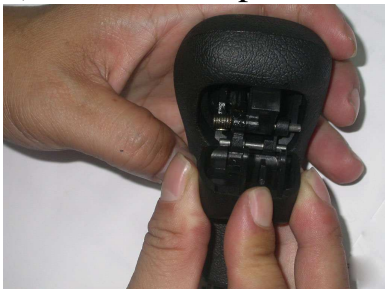

2). Insert pin into the push button upper hole. The pin must go through



U-shape from the bracket (see diagram 5)

3). Use needle –nose pliers to clamp the spring and move the spring on the



pin (see diagram 6)

4). Push new button back to normal position.